

Carolina Security Easy As 1-2-3 NX System

POWER Light is "on" when premise power is present, flashes to indicate a low battery condition.

ARMED Light is "on" when armed, "off" when disarmed. Flashes to indicate a previous alarm.

INSTANT Light is "on" when system is set for no entry delay.

FIRE Light is "on" to indicate fire alarm, flashes to indicate a trouble condition with your fire alarm system.

PULL OUT ZONE ID TAB

ZONE LIGHTS are on steady to indicate bypass, slow flash for zone fault, fast flash for service condition.

Night Time Arming: Press "Stay". System is armed and desired motions are bypassed. Press twice to remove entry door delays.

READY Light is "on" when system is ready to arm.

CHIME Feature: The keypads will sound a chime when a protected door is opened.

SERVICE Light is "on" to indicate a trouble condition with your system.

When Exiting: Press "Exit" to arm your system. All zones are secure.


Your alarm has three settings: Armed in "Stay" mode, armed in "Exit" mode, and disarmed.

Cancel Feature has been programmed as an automatic feature. This button has no function.


5 FUNCTION KEYS

In case of fire press here. Fire siren will sound.

In need of help press here. This is a silent alarm

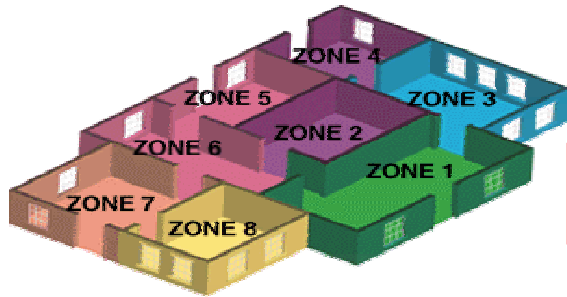

Each zone is a different part of your system. For example: Zone 1 Front Door, Zone 2 Motion Hall, etc.

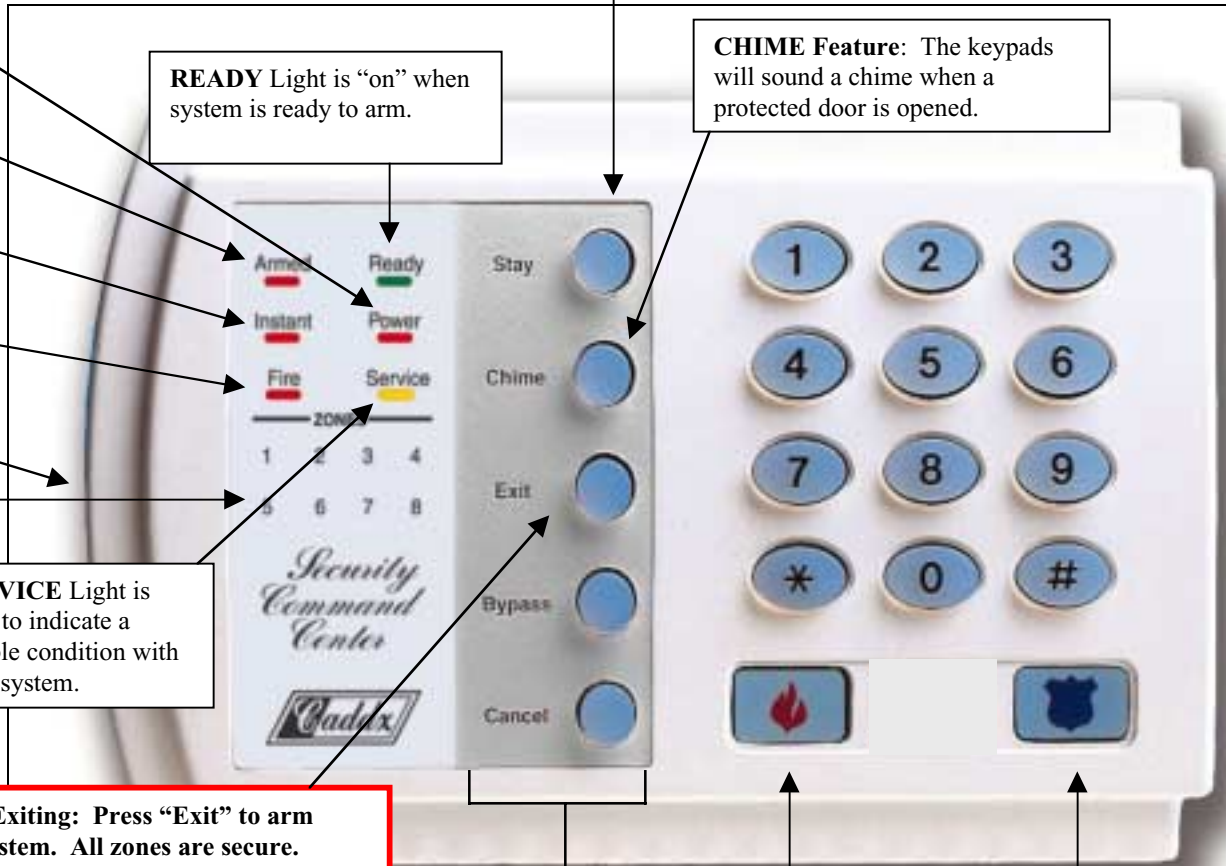

Need more help call anytime.

Triad, NC (336) 286-5900 • Greenville, SC (864) 246-4513 • Columbia, SC (803) 794-1599