

# Carolina Security Easy As 1-2-3 NX System

**POWER** Light is "on" when premise power is present, flashes to indicate a low battery condition.

**ARMED** Light is "on" when armed, "off" when disarmed. Flashes to indicate a previous alarm.

**INSTANT** Light is "on" when system is set for no entry delay.

**FIRE** Light is "on" to indicate fire alarm, flashes to indicate a trouble condition with your fire alarm system.

**PULL OUT ZONE ID TAB**

**ZONE LIGHTS** are on steady to indicate bypass, slow flash for zone fault, fast flash for service condition.

**Night Time Arming:** Press "Stay". System is armed and desired motions are bypassed. Press twice to remove entry door delays.

**READY** Light is "on" when system is ready to arm.

**CHIME** Feature: The keypads will sound a chime when a protected door is opened.

**SERVICE** Light is "on" to indicate a trouble condition with your system.

**When Exiting:** Press "Exit" to arm your system. All zones are secure.


Your alarm has three settings: Armed in "Stay" mode, armed in "Exit" mode, and disarmed.

Cancel Feature has been programmed as an automatic feature. This button has no function.


**5 FUNCTION KEYS**

In case of fire press here. Fire siren will sound.

In need of help press here. This is a silent alarm

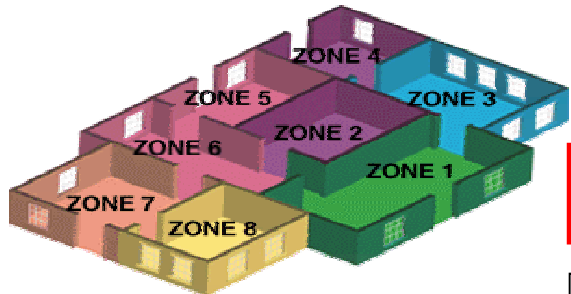

Each zone is a different part of your system. For example: Zone 1 Front Door, Zone 2 Motion Hall, etc.

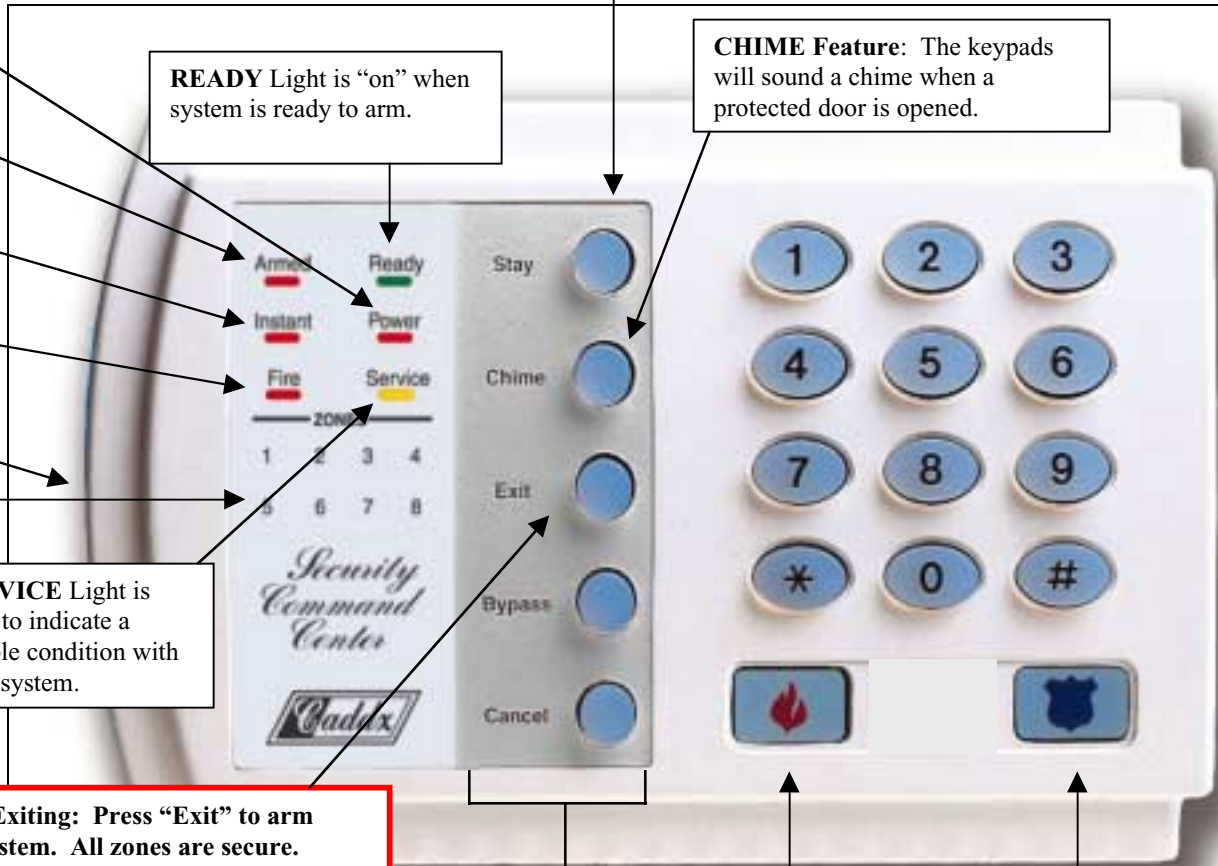

Need more help call anytime.

Triad, NC (336) 286-5900 • Greenville, SC (864) 246-4513 • Columbia, SC (803) 794-1599